





 

 



 

 


 








 
 













 
 

 
 



 



TERMINAL CONFIGURATIONS

Terminal shapes vary from one battery to another. By identifying the correct replacement battery from the listing in this book, you are assured of the proper terminal configuration. For custom applications, refer to the following chart to identify terminal shape and corresponding batteries.

TERMINAL TYPE	FRONT	SIDE	TOP	BATTERY TYPE
1				PTX16-BS-1, CB7C-A, CB14L-A1
2				CB9L-A2, CB16AL-A2
3				CB7L-B, C60-N24-A, C60-N24L-A, C60-N24AL-B, 12N24-3
4				PTX14AHBS-FS, PTX14AHLBS-FS, PTX14BS-FS, PTX15LBS-FS, PTZ16H, PTX20BS-FS, PTX20LBS-FS, PIX50LBS-FS, PTX14AH-BS, PTX14AHL-BS, PTX14-BS, PTX14L-BS, PTX15L-BS, PTX16-BS, PTX20CH-BS, PTX20-BS, PTX20L-BS, PIX50-BS, PIX50L-BS, CB12C-A, CB16B-A, C50-N18L-A3, CB30L-B, CB30CL-B
5				PTX4LBS-FS, PTX5LBS-FS, PTZ5S, PTX7ABS-FS, PTX7LBS-FS, PTZ7S, PTZ8V, PTX9BS-FS, PTX12BS-FS, PTX19CLBS-FS, PIX30LBS-FS, PIX30CLBS-FS, PTX4L-BS, PTX5L-BS, PT6.5L-BS, PTX7A-BS, PTX7L-BS, PTX9-BS, PTX12-BS, PTX19CL-BS, PIX30L-BS, PIX30CL-BS, CB4L-A, CB4L-B, CB16CL-B
6				PTX12AABS-FS, PTX19BS-FS, PTX19LBS-FS, PTX19-BS, PTX19L-BS, PT9A-BS, CB16-B-LM, CB16HL-A-LM, CB3L-A, CB3L-B, CB5L-B, CB7-A, CB9-B, CB9A-A, CB9L-B, CB10L-B, CB12A-A, CB12AL-A, CB12A-B, CB14A-A, CB16-B, CB16L-B, 6N6-3B, 6N6-3B-1, 6CB8L-B, 6N11-2D, 6N11A-1B, 6N12A-2D, B38-6A, B39-6, B54-6, 12N5-3B, 12N5-4B, 12N5-5-3B, 12N5-5-4A, 12N5-5A-3B, 12N7-4A, 12N7-3B, 12N7D-3B, 12N7-4B, 12N9-3A-1, 12N9-3B, 12N9-4B-1, 12N10-3A, 12N10-3A-1, 12N12A-4A-1
7				C50-N18L-A-LM, CB16B-A1, HCB16A-AB, CB18-A, CB18L-A, C50-N18A-A, SC50-N18L-AT
8				CB10A-A2, CB10L-A2, CB10L-B2, CB12AL-A2, CB12B-B2, CB14A-2, CB14A-A2, CB14B-2, CB14L-A2, CB14L-B2, SCB14L-A2, SCB14L-B2, 12N11-3A-1, 12N14-3A
9				CHD4-12
10				51913-FS, 51814, 51913, 53030
11				PT6B-3, PT7B-4, PT9B-4, PTZ10S, PT12B-4, PTZ12S, PT14B-4, PTZ14S, PTX12ABS-FS, PTR9-BS, PTX12A-BS
12				PTR4A-BS
13				PTX4B-BS
14				P11U1LD-FS, U1(9), U1(9)R
15				PTX20HBS-FS, PTX20HLBS-FS, PIX30HLBS-FS, PIX32HLBS-FS
16				PTX14LBS-FS
17				P26RH-FS