

PSL-HV-48300-GC2 INSTALLATION GUIDE



STEP 1

Remove old batteries from your battery tray.

- Set your parking brake on, turn the ignition key to the OFF position, and remove the key.
- If your cart has a Run/Tow switch, switch it to the Tow position.
- It is important to wear PPE (Personal Protective Equipment) such as gloves and safety glasses to prevent coming into contact with battery acid.
- Disconnect all cabling, watering systems, and accessories from your old batteries and remove them.



STEP 2

Decide where you will install your busbar by setting your PSL-HV-48300-GC2 into your battery tray.

Things to consider:

- Proper weight distribution
- Proximity to where you will be installing your busbar
- Ability to easily connect or disconnect cables (cart to busbar and busbar to batteries) them.

STEP 3

Permanently install your busbar using the included hardware.



PSL-HV-48300-GC2 INSTALLATION GUIDE



STEP 4

Connect cables to your busbar.

- Make sure you are always connecting all of the positive (+) terminals to the positive end of the busbar, and all of the negative (-) terminals to the negative end of the busbar.
- If you are going to be using an external charger, you will have one cable left over that is not plugged into a PSL-HV-48300-GC2 unit. This will be left available for charging.



STEP 5

Set your PSL-HV-48300-GC2 batteries in your battery tray and secure them with the OEM mounting solution or use the hardware provided.

- The included mounting brackets are height-adjustable and can be installed on any side of your PSL-HV-48300-GC2 so you can clear any dividers in your battery tray.



STEP 6

Plug in the cables connected to your busbar into your PSL-HV-48300-GC2 batteries.

- Ensure cables have a secure connection by pushing them in all the way into the battery, you will hear a click when they are fully inserted.

